




## NEW IMPROVED WIRE SPLICES!

Included with your Humane Contain kit are three of our superior waterproof wire splices. To use:

1. Push the two ends of the wires into the outer two holes in the splice. View from the bottom to make sure the wires are fully inserted.



2. Using pliers squeeze the top black button down solidly until it bottoms out.

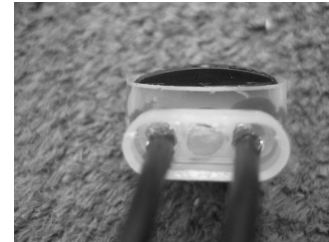

Additional splices are available from [www.hightechpet.com](http://www.hightechpet.com)